

 
LED BOLLARD LIGHT INSTALLATION AND OPERATION MANUAL





Lighting Effect Display



Product Dimensions

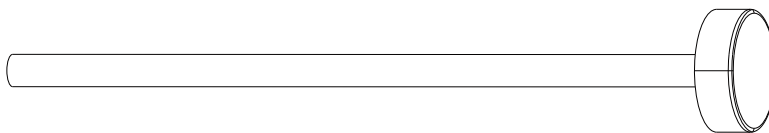


614,7

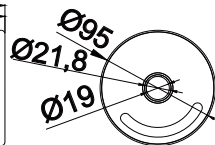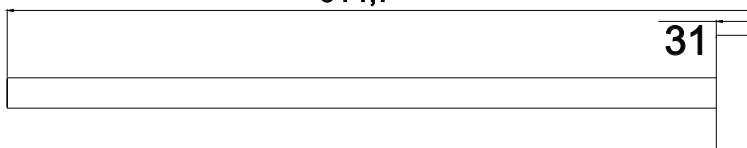  


Light Fitting Specification	STELA
Light Dimension	614.7*Ø95MM
Light Source Power	7W
CCT	2700-6500K
CRI	> 80
IP Rating	IP65
Beam	180°/360°/Customizable Optics
Materials	Aluminum Housing
Finishes	Aluminum/Black/Optional RAL color

 Lighting Simulations

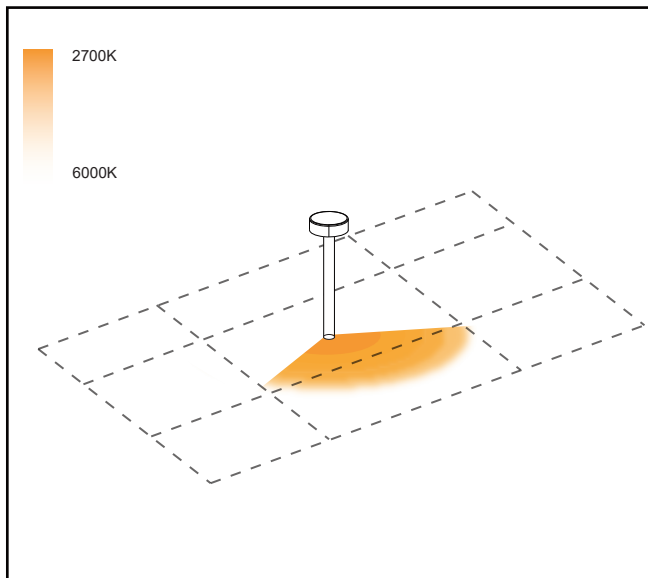


- Photometric simulations optimize bollard placement for uniform illumination, free of dark spots or glare.
- The models account for surface reflectance and site obstacles to ensure reliable performance in any setting.

 Luminaire Arrangement

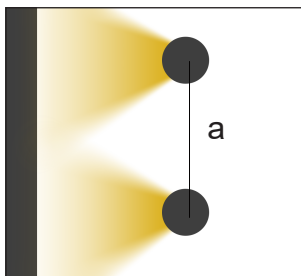


 During the installation of the STELA bollard light, while a 2-metre installation distance is recommended, the definitive spacing remains subject to field verification. The installation method of the lamps must be strictly followed according to the installation instruction below.

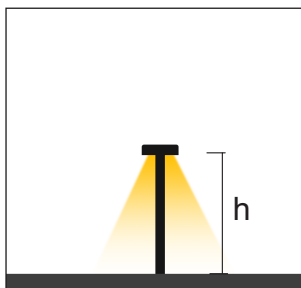

The pole height is configurable in accordance with the prevailing installation environment, with standard dimensions of 300, 500, 600, 800, and 1,000 mm available, along with the flexibility to accommodate bespoke height specifications.

 
Installation Instructions

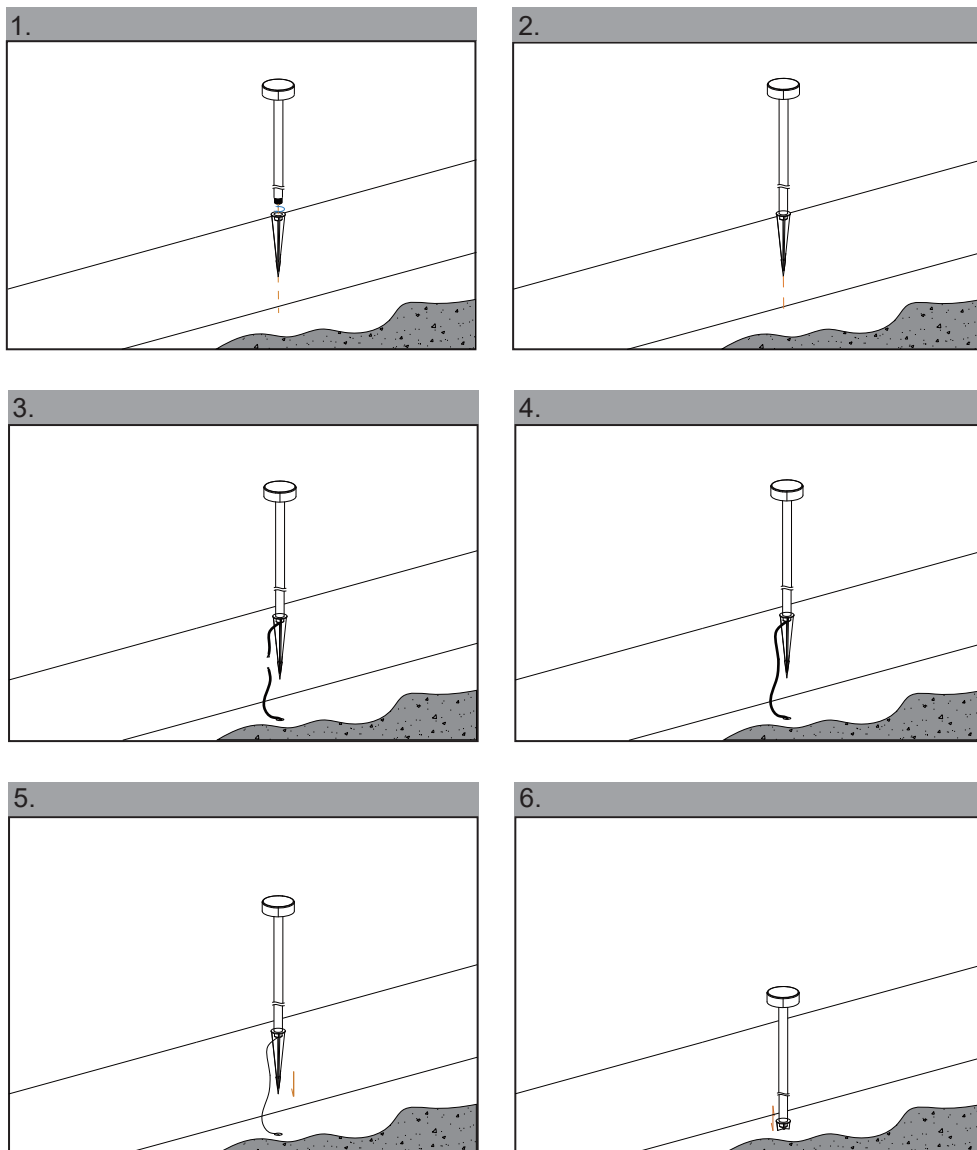

Power Supply and Electrical Installation(AC)

Mono-color Wiring Diagram (85-265V):

 
In this setup, the light is plug-and-play, ready for use with direct mains power connection. No additional control is required as it is a constant-on setup.

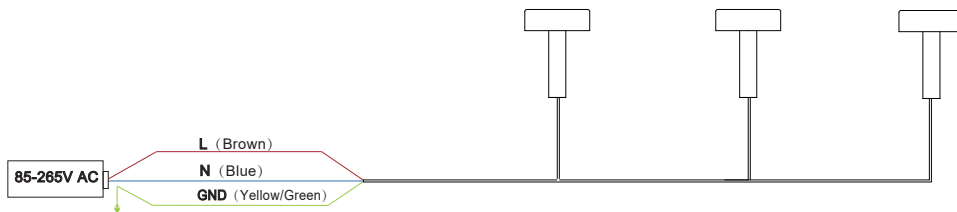

Power Supply and Electrical Installation(DC)

Mono-color Wiring Diagram (24V/DC):

 In this setup, the light connects directly to the power supply. The power of a CC circuit is not more than 80% of the power supply. No additional control is required as it is a constant-on setup.

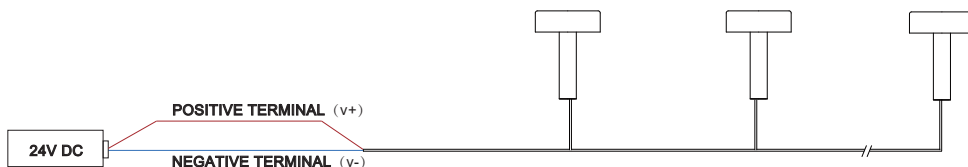

WARNINGS AND REMARKS FOR INSTALLATION AND MAINTENANCE

Safety Instructions

To reduce risks of death, injury or property damage from fire, electric shock, falling parts, cuts, abrasions and other hazards, please read all warnings and instructions provided with the luminaire (including packaging and fixture labels).

The light source may only be replaced by the manufacturer, its service agent, or a similarly qualified professional.

Always power off before replacement to avoid electric shock.

The manufacturer accepts no liability for damage caused by improper use or installation.

Installation

 
Use high-quality components only. Avoid touching the LED light opening during installation or relamping.

IMPORTANT

To ensure secure operation, the luminaire housing must positioned precisely in relation to the mounting plate.

Cleaning And Maintenance

Clean the luminaire regularly with a clean, lint-free cleaners from dirt. Please do not clean the luminaire with using high-pressure liquids.



	Cable Details
A	6±7 mm
A	< 25 mm
C	Pg11: 5±10 mm PG13,5: 6±12 mm(for DALI)
D	≤2.5 mmq

ATTENTIONS

Do not disassemble any parts.

Ground wire must be grounded (impedance <10Ω).

Wire must strictly per instructions to avoid failure/debug issues.

Do not pull exposed wires (risk of poor contact).

Store at ≤70 °C 10%-85% humidity. Use at -20 °C~+40 °C.

Installation/maintenance by professionals only.

WARNING

Confirm lamp parameters before installation.

Use correct wire diameter and series/parallel connection to avoid overheating from excessive current.

Optical radiation complies with IEC62471-2006 "exempt level".

Install/use strictly per instructions; do not modify lamp structure or internal parts.

Protect wires from sharp edges to avoid damage/wear.

Only electrical personnel should install the luminaire configuration device.

Check insulation of wires/components after installation.

Do not use in severely corrosive, water-submerged environments (e.g., acids/alkalis) or cover with thermal insulation pads.

Cut off power before installation to prevent electric shock.

Ensure voltage is within rated range.