




LED FLOOD LIGHT INSTALLATION AND OPERATION MANUAL

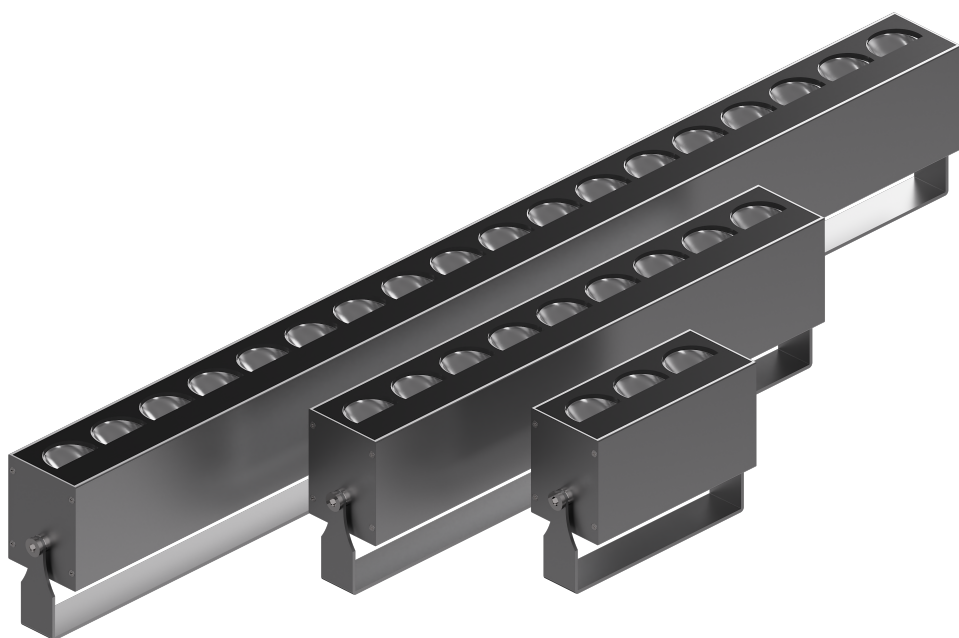

Lighting Effect Display

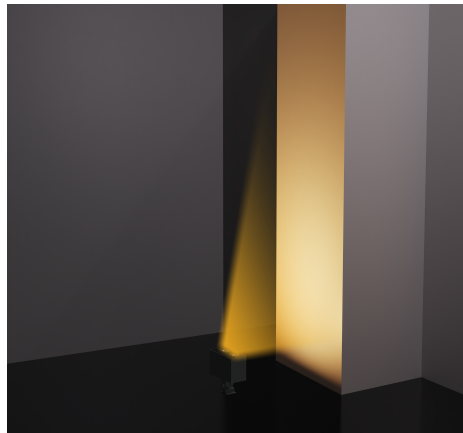

Product Dimensions

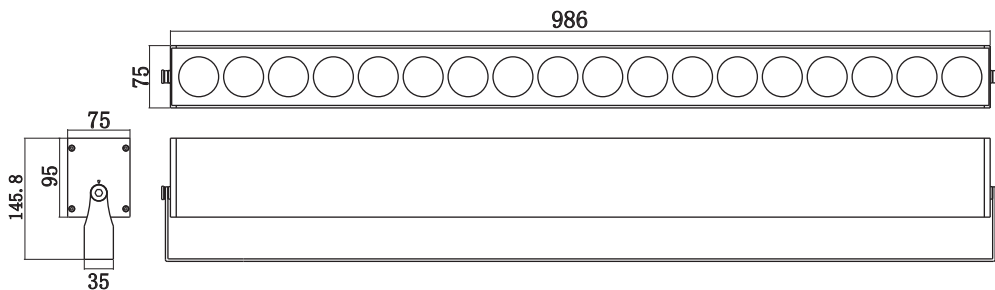

Light Fitting Specification	LUMOS-B
Light Dimension	986*75*145.8MM
Light Source Power	120W
CCT	2700-6500K/RGBW
CRI	>80
IP Rating	IP67
Beam	50°
Materials	Aluminum Die-casting housing with Tempered safety glass
Finishes	Aluminum/Black/Optional RAL color



Address: C T CORPORATION SYSTEM 28
LIBERTY STREET, NEW YORK, NY 10005



Send an Email

Email: sales@cregini.com
Website: www.cregini.com




Phone Call


Phone: +1(224)378-4648

IES


LUMINOUS INTENSITY DISTRIBUTION

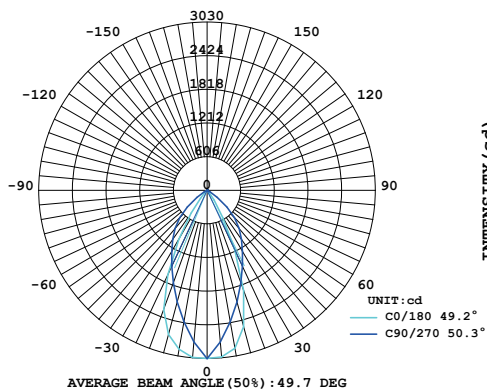

LUMINOUS INTENSITY DISTRIBUTION

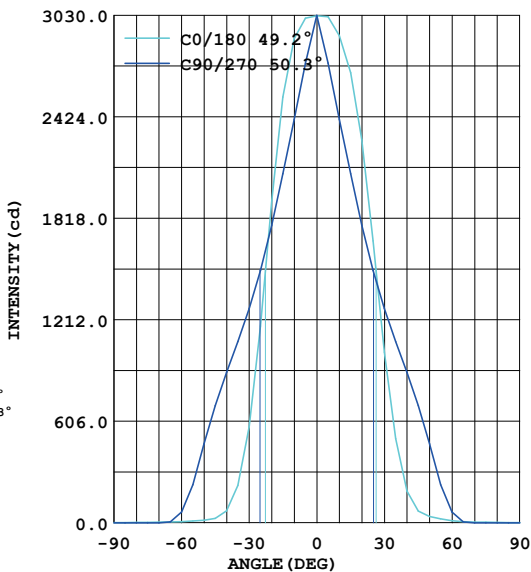


Luminaire Arrangement

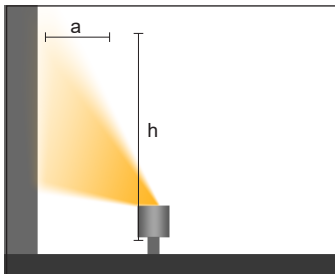

Lens Wallwashers

During the installation of the FOREST flood light, it is required to strictly ensure that the lens is perpendicular to the wall. The installation method of the lamps must be strictly followed according to the installation instruction below.

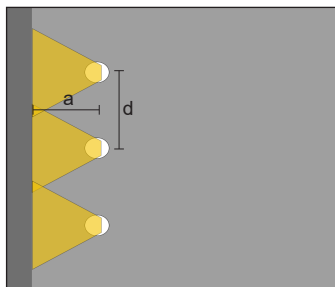

The recommended installation distance (a) from the FOREST flood light to the wall is approximately 30-50 cm, with the exact distance adjustable based on on-site conditions.

For good longitudinal uniformity, the luminaire spacing (d) of FOREST flood light is determined by the length of the lamp fixture.



Address: C T CORPORATION SYSTEM 28
LIBERTY STREET, NEW YORK, NY 10005



Send an Email

Email: sales@cregini.com
Website: www.cregini.com




Phone Call


Phone: +1(224)378-4648

Installation Instructions


1.

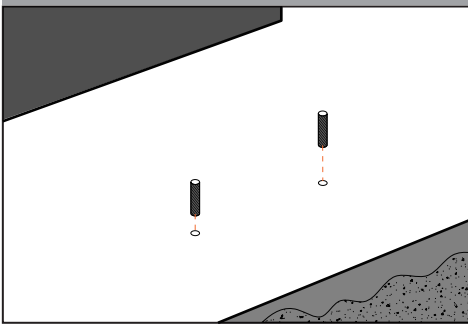




2.

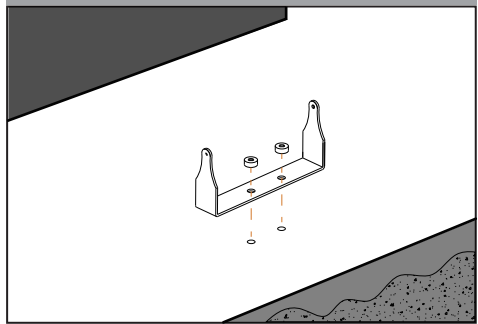

3.

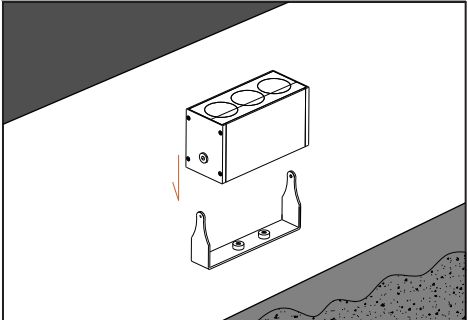


4.

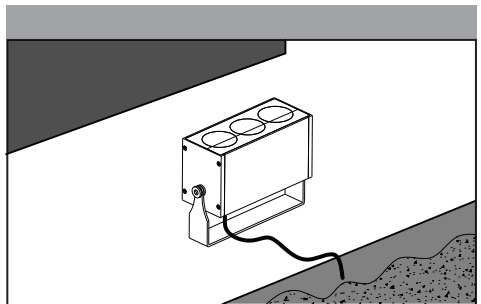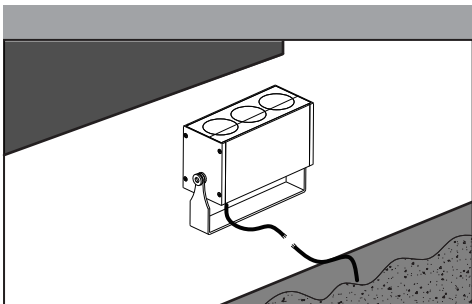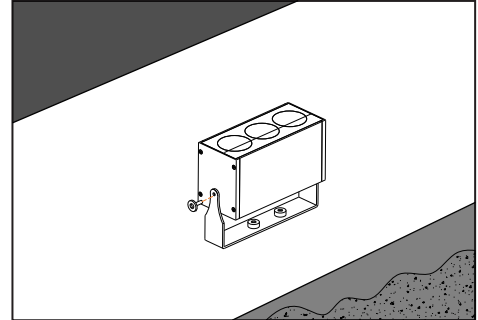

Power Supply and Electrical Installation(AC)

Mono-color Wiring Diagram (85-265V):


In this setup, the light is plug-and-play, ready for use with direct mains power connection. No additional control is required as it is a constant-on setup.

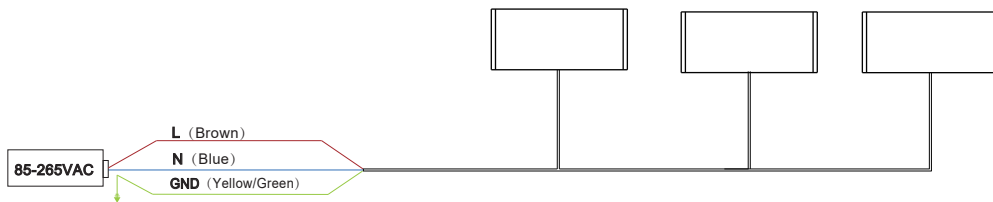

Power Supply and Electrical Installation(DC)


Mono-color Wiring Diagram (24V/DC):

In this setup, the light connects directly to the power supply. The power of a CC circuit is not more than 80% of the power supply. No additional control is required as it is a constant-on setup.

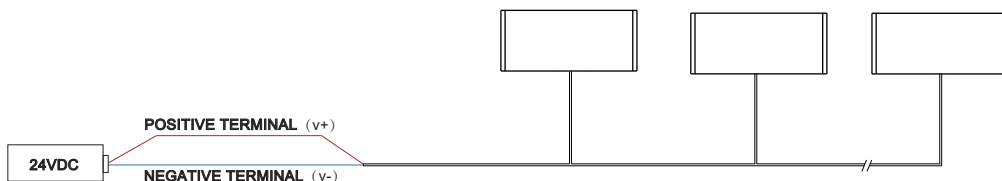

DMX512 Wiring Diagram (24V/DC):

This connects the wiring to the light fixture as described. The signal cable (3 wires for DMX, P(coding), DMX+, DMX-) is connected from the controller's output to the fixture's DMX input (IN) port. Multiple lights can be daisy-chained by connecting the DMX OUT one fixture to the DMX IN of the next. Terminate the last fixture in the chain with a DMX terminator (120 ohms) to avoid signal reflection.

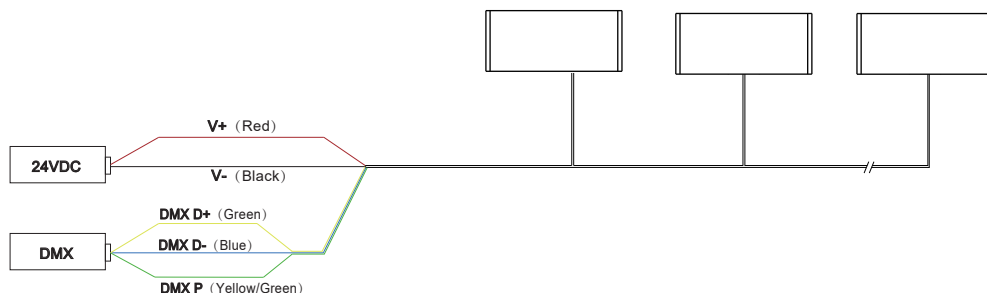

WARNINGS AND REMARKS FOR INSTALLATION AND MAINTENANCE

Safety Instructions

To reduce risks of death, injury or property damage from fire, electric shock, falling parts, cuts, abrasions and other hazards, please read all warnings and instructions provided with the luminaire (including packaging and fixture labels).

The light source may only be replaced by the manufacturer, its service agent, or a similarly qualified professional.

Always power off before replacement to avoid electric shock.

The manufacturer accepts no liability for damage caused by improper use or installation.

Installation


Use high-quality components only. Avoid touching the LED light opening during installation or relamping.

IMPORTANT

To ensure secure operation, the luminaire housing must be positioned precisely in relation to the mounting plate.

Cleaning And Maintenance

Clean the luminaire regularly with a clean, lint-free cleaners from dirt. Please do not clean the luminaire with using high-pressure liquids.



	Cable Details
A	6÷7 mm
A	< 25 mm
C	PG11: 5÷10 mm PG13,5: 6÷12 mm (for DALI)
D	≤ 2.5 mmq

ATTENTIONS

Do not disassemble any parts.

Ground wire must be grounded (impedance <10Ω).

Wire must strictly per instructions to avoid failure/debug issues.

Do not pull exposed wires (risk of poor contact).

Store at ≤70 °C 10%-85% humidity. Use at -20 °C ~+40 °C.

Installation/maintenance by professionals only.

WARNING

Confirm lamp parameters before installation.

Use correct wire diameter and series/parallel connection to avoid overheating from excessive current.

Optical radiation complies with IEC62471-2006 "exempt level".

Install/use strictly per instructions; do not modify lamp structure or internal parts.

Protect wires from sharp edges to avoid damage/wear.

Only electrical personnel should install the luminaire configuration device.

Check insulation of wires/components after installation.

Do not use in severely corrosive, water-submerged environments (e.g., acids/alkalis) or cover with thermal insulation pads.

Cut off power before installation to prevent electric shock.

Ensure voltage is within rated range.



Address: C T CORPORATION SYSTEM 28
LIBERTY STREET, NEW YORK, NY 10005



Send an Email

Email: sales@cregini.com
Website: www.cregini.com



Phone Call

Phone: +1(224)378-4648